


# Installation, Operation and Maintenance Manual

# **ScaleStop Commercial Systems**

**Chemical Free, Salt Free Scale Prevention** 

NSS-1465C NSS-1665C

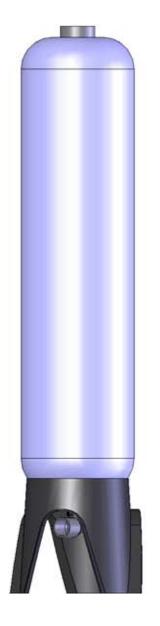

next filtration technologies, inc. 6586 Hypoluxo Road, Suite 362 Lake Worth, FL 33467

(800) 783-0310

email: info@nextfiltration.com web: www.nextfiltration.com © 2006-2007 next filtration technologies inc.



# **Table of Contents**

Introduction	3
System Overview	4
System Specifications	5
Cautions	7
Notes to the Installer	6 & 7
Installation and Start-Up	8 & 9
Warranty	10 & 11



#### Introduction

The next-ScaleStop system provides protection from scale formation on internal and external plumbing surfaces. The ScaleStop system can be installed at the point of entry to a building to treat both hot and cold water, or it can be located directly before a water heater, boiler, or other water using device that requires protection from hard water.

ScaleStop prevents scale by transforming the normal dissolved hardness minerals into undissloved crystal microparticles. These crystals stay suspended in the water and have a greatly reduced ability to react and attach to surfaces like dissolved hardness does. Therefore the problem of internal build-up of scale in pipes, water heaters and on fixtures and glass is greatly reduced.


ScaleStop is not a water softener – Water treatment chemistry (e.g. antiscalants, sequestrants, etc.. will most likely have to be changed to be compatible with ScaleStop treated water. Laundry and ware-washing chemistry will likewise require adjustments.

#### **ScaleStop Benefits.**

- Chemical Free Scale Prevention. Cost savings and environmental benefits.
- Virtually Maintenace Free. No salt bags or other chemicals to buy, transport and store.
- No Electricity, no wastewater, completely self-contained.
- Improves the efficiency of water-using appliances.
- Simple installation no electrical and drain hookup.
- Safe for landscaping and lawn watering. No need for costly bypass plumbing.
- Compatible with all on-site and community wastewater treatment systems.
- Not subject to water softener restrictions and "bans".
- Scalestop treated water has no added sodium, is safe to drink and is well suited for use in food and beverage preparation.




# **System Overview**

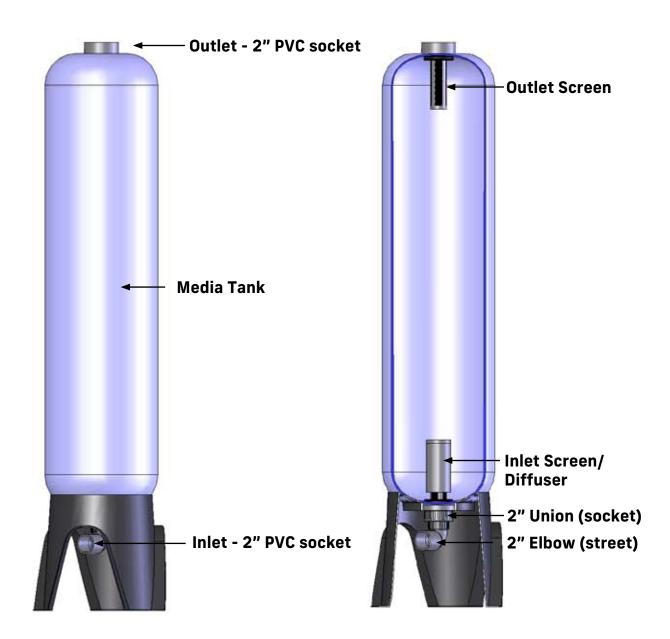



# **Equipment Specifications**

next-ScaleStop systems are complete, self-contained, loaded with media and ready to use. A simple inlet and outlet connection is all that is required for installation. Please review operating pressures, temperatures and water chemistry limitations to ensure compatibility.

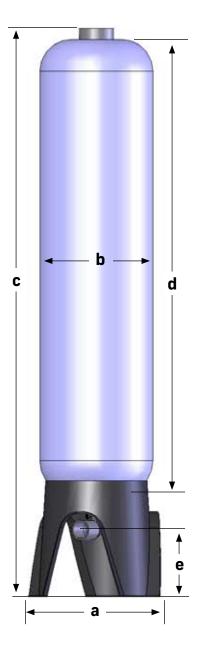

#### **Specifications**

Inlet Connection	2" PVC Union with Socket.
Outlet Connection	2" PVC Socket
Temperature	40° - 110°F
рH	6.5 to 8.5
Ferrous Iron, Max*	0.3 mg/L
Manganese, Max*	0.05 mg/L
Copper, Max*	1.3 mg/L
Water Pressure	15 min, 100 max (PSI)

#### **Mechanical Specs.**

	1465	1665		
Dry Weight (lbs)				
Service Weight (lbs)	350	420		
Dimensions (nominal - inches)				
а	17	17		
b	14	16		
C*	79	79		
d	65	65		
e*	10.25	10.50		

<sup>\*</sup> The overall height and the height of the inlet fitting varies due to material variations and assembly tolerances. Please allow additional clearance above the tank for making connections.

# Maximum Service Flow (gpm) vs. Water Temperature Continuous Duty Systems:

System	40°F	45°F	50°F	55°F	60°F	65°F	70°F
14-65	40	44	48	50	50	50	50
16-65	45	51	56	59	63	69	75

#### **Intermittent Duty Systems:**

14-65	50 GPM at all temperatures
16-65	75 GPM at all temperatures

<sup>\*</sup> Intermittent duty is defined as less than 2 hours of Maximum Flow per 24 hour period. Higher Flow rates can be achieved by combining systems in an array.





# **Important Note on System Interactions**

#### Using ScaleStop with other water treatment equipment.

Due to the unique properties of ScaleStop, there are some unique requirements for using ScaleStop in conjunction with filtration or other forms of water treatment.

- 1. ScaleStop must be the last stage in the treatment chain. Do not install any filters after ScaleStop or before any devices for which scale prevention is required. POU filters, e.g. carbon or RO are exempt from this requirement.
- 2. Do not apply phosphate or any other antiscalant either before or after ScaleStop.

#### **Installation of Your System in Copper or Metal Piping Systems**

If your new filter system is to be installed in a metal (conductive) plumbing system, i.e., copper, or galvanized steel pipe, the plastic components of the system will interrupt the electrical continuity of the plumbing system.

As a result, any stray currents from improperly grounded appliances downstream or potential galvanic activity in plumbing systems can no longer ground through the contiguous metal plumbing.

Some homes may have been built in accordance with building codes, which encouraged the grounding of electrical appliances through the plumbing system. Consequently, the installation of a bypass consisting of the same material as the existing plumbing, or a grounded "jumper wire" bridging the equipment and reestablishing the contiguous conductive nature of the plumbing system must be installed prior to your systems use. This is simple and easy step to take if you are installing your water treatment system into copper piping.

A simple ground jumper wire with a pipe clamp can be purchased at any Home Center, or hardware store etc. for a few dollars.

PLEASE CONSULT A LICENSED ELECTRICIAN BEFORE ATTEMPTING TO INSTALL.





# An important note about iron, manganese and copper in the water supply.

#### **Iron and Manganese**

Just as with conventional water softening media, ScaleStop needs to be protected from excess levels of certain metals that can easily coat the active surface, reducing its effectiveness over time. Public water supplies rarely, if ever, present a problem, but if the water supply is from a private well confirm that the levels of iron (Fe) and manganese (Mn) are less than 0.3 mg/L and 0.05 mg/L respectively. Copper should be less than 1.3 mg/L.

#### Copper

Copper usually originates from new copper plumbing upstream of the ScaleStop system. If this condition exists, we recommend waiting 3-4 weeks before placing the system in operation. This will allow the copper surfaces to be fully flushed and develop a natural protective surface. To further minimize any problem with excess copper the plumbers should be advised to avoid applying excess flux on the inner surfaces of the pipe and to use a low-corrosivity water soluble flux listed under the ASTM B813 standard. Once the plumbing connections are complete, place the ScaleStop system in bypass prior to following the startup procedure and flush the plumbing for at least 10 minutes.



#### \ Cautions!

- Do not let the system freeze. Damage to the tank may result.
- System must be operated in a vertical position. Do not lay it down during operation. The
  system may be placed in any position for shipping and installation but must be operated in
  the vertical position.
- Place the system on a smooth, level surface. Because the system operates in an upflow, fluidized bed mode, having a level surface is more important than with a softener or media filter.
- A bypass valve should be installed on every system to facilitate installation and service.
- Observe all local plumbing and building codes when installing the system.



#### Notes to the Installer.

The ScaleStop system differs from a conventional softener or media filter in a number of key respects.

- The system is light and only partially filled with media. This is normal. The upflow operation
  of the system requires a lot of freeboard to allow the bed to fully fluidize.
- The system has no underbed so you can tip the system over without any fear of upsetting the media. This makes transportation and installation much easier than conventional systems.
- Because the ScaleStop system operates in the Up-Flow mode, the tank connections are opposite of what you're used to.
- Please see the "important note about iron, manganese and copper" above.
- Please see the note about "Using ScaleStop with other water treatment equipment" on the previous page.



#### **Installation**

#### Tighten the Tank Bushings



Tank bushing. Rotate Clockwise to tighten.

Lay the tank down and check the bushings on the inlet and outlet (bottom and top) of the tank. It is common for them to loosen during shipment. Tighten the bushings with a strap wrench as needed

#### **Install the Tank Fittings**



Connect the Union fitting to the inlet bushing

## (bottom) Install Piping



Connect the inlet and outlet plumbing according to your preferences and any applicable local codes. Include sample/drain ports with hose bibb connections on inlet and outlet piping to facilitate startup and service.



# **Important Notes!**

NOTE: We recommend the installation of a dual-union ball-valve on the inlet and outlet to isolate the tank for servicing.

NOTE: A full bypass should be installed so that the full service flow can be routed around the system as needed for servicing.

NOTE: The ScaleStop system operates in the UPFLOW mode which is opposite of a conventional softener. The inlet is on the bottom, the outlet on the top.




Support the Piping



The full weight of the piping and valves must be supported by unistrut, pipe hangers or other means. The tank connections can not support the weight of the piping. This photo from a multitank system insallation shows properly supported piping.



# **Start-Up**

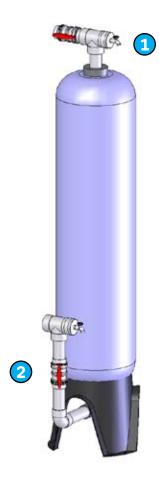

- 1. Connect a hose to the hose bibb on the outlet of the tank. Run the hose to a drain.
- 2. Slowly / partially open the supply water ball valve. Allow the tank to slowly fill with water. When a steady stream of water appears at the drain, close the supply valve.
- 3. Open the inlet and outlet valves on the system. Transfer the bypass valves from Bypass to the Service position. Open a nearby faucet downstream from the ScaleStop system to relieve any air.
- 4. Check for leaks. Repair as needed.
- 5. The system is now ready for service.



#### LIMITED WARRANTY

Next Filtration Technologies Inc. warrants the ScaleStop system as follows:

- The Tank is warranted to be free of defects in materials and workmanship for 5 years from thedate of original installation.
- The Head is warranted to be free of defects in materials and workmanship for five years from date of original installation.
- The ScaleStop media is warranted for performance for a period of two years from the date of the original installation.

#### **Conditions**

- 1. The ScaleStop system must be installed and serviced by an authorized Next Filtration Technologies Inc. dealer, or other entity approved by Next.
- 2. Any component failure must not result from abuse, fire, freezing or other acts of nature, violence, or improper installation.
- 3. Equipment must be installed and operated in compliance with the local plumbing codes, and on an approved water supply.
- 4. Equipment is limited to use at water pressures not to exceed 100 PSI and temperatures not to exceed 110 degrees F.
- 5. Water supply must not exceed 3.0-PPM chlorine. For water supply exceeding 3.0 PPM chlorine, pretreatment is required. (Please contact your water treatment specialist.)
- 6. Information, including model number, serial number, and date of installation, must be provided for any claims pertaining to equipment in warranty.
- 7. Defective parts are subject to inspection by either Next Filtration Technologies, Inc. or any authorized representative before final commitment of warranty adjustment is made.
- 8. Next Filtration Technologies Inc. reserves the right to make changes or substitutions in parts or equipment with material of equal quality or value and of then current production.

#### Limitations

Our obligation under this warranty with respect to the tank or valve is limited to furnishing a replacement for, or at our option, repairing any part or parts to our satisfaction that prove defective within the warranty period stated above. Such replacement parts will be delivered to the owner F.O.B. nearest factory, at no cost, excluding freight and local labor charges, if any.

Our obligation under this warranty with respect to the Scale Stop media will be limited to furnishing a replacement for the media within two years from date of original installation. Such replacement media will be delivered to the owner F.O.B. nearest factory, at no cost, excluding freight and local labor charges, if any. Damage to the media due to chlorine, other oxidizers or fouling or any other operation outside of the limits shown under Specifications, is not covered by this warranty.

Next Filtration Technologies Inc. shall not be liable for freight, handling or labor charges, or consequential damages.



# **Warranty Registration**

We appreciate your purchase of the chemical-free ScaleStop, scale control system. Under proper conditions you will have years of trouble-free performance from this product.

The laws of the United States do not require consumers to return warranty cards or registration cards to be covered by an implied warranty, however, you must keep a copy of your receipt.

At Next Filtration we support your rights as a consumer. We hope you will take the time to fill out the warranty registration below in order to insure that we have documentation showing that you have purchased the system and that a qualified technician installed it. The information provided will be kept in strict confidence and will never be available to marketing companies.

\*\*\* Please detach the section below, fill out the limited information and send it, along with a copy of your receipt to:

Next Filtration Technologies Inc Warranty Registration 6586 Hypoluxo Road, STE 362 Lake Worth, FL 33467

Owner's name:

Address: \_\_\_\_\_

Model number: \_\_\_\_\_
Installation date: \_\_\_\_\_

Installer or Dealer name:

Installer or Dealer contact number: